


1. The sensor must be turned ON, indicated by a green led light.
2. Click at the Bluetooth Icon at the desktop.
3. Click at "Search Device". The sensor will appear as a blue question mark Icon with the four last digits of the sensor serial number.
4. Click at the Sensor Icon and a Bluetooth Serial Port Icon will appear.
5. Click at the Bluetooth Serial Port Icon to setup a serial COM port which is done automatically and a COM port number is dedicated to the COM, in this example COM3. The Bluetooth Serial Port turns green and the Bluetooth led indicator at the sensor light blue.

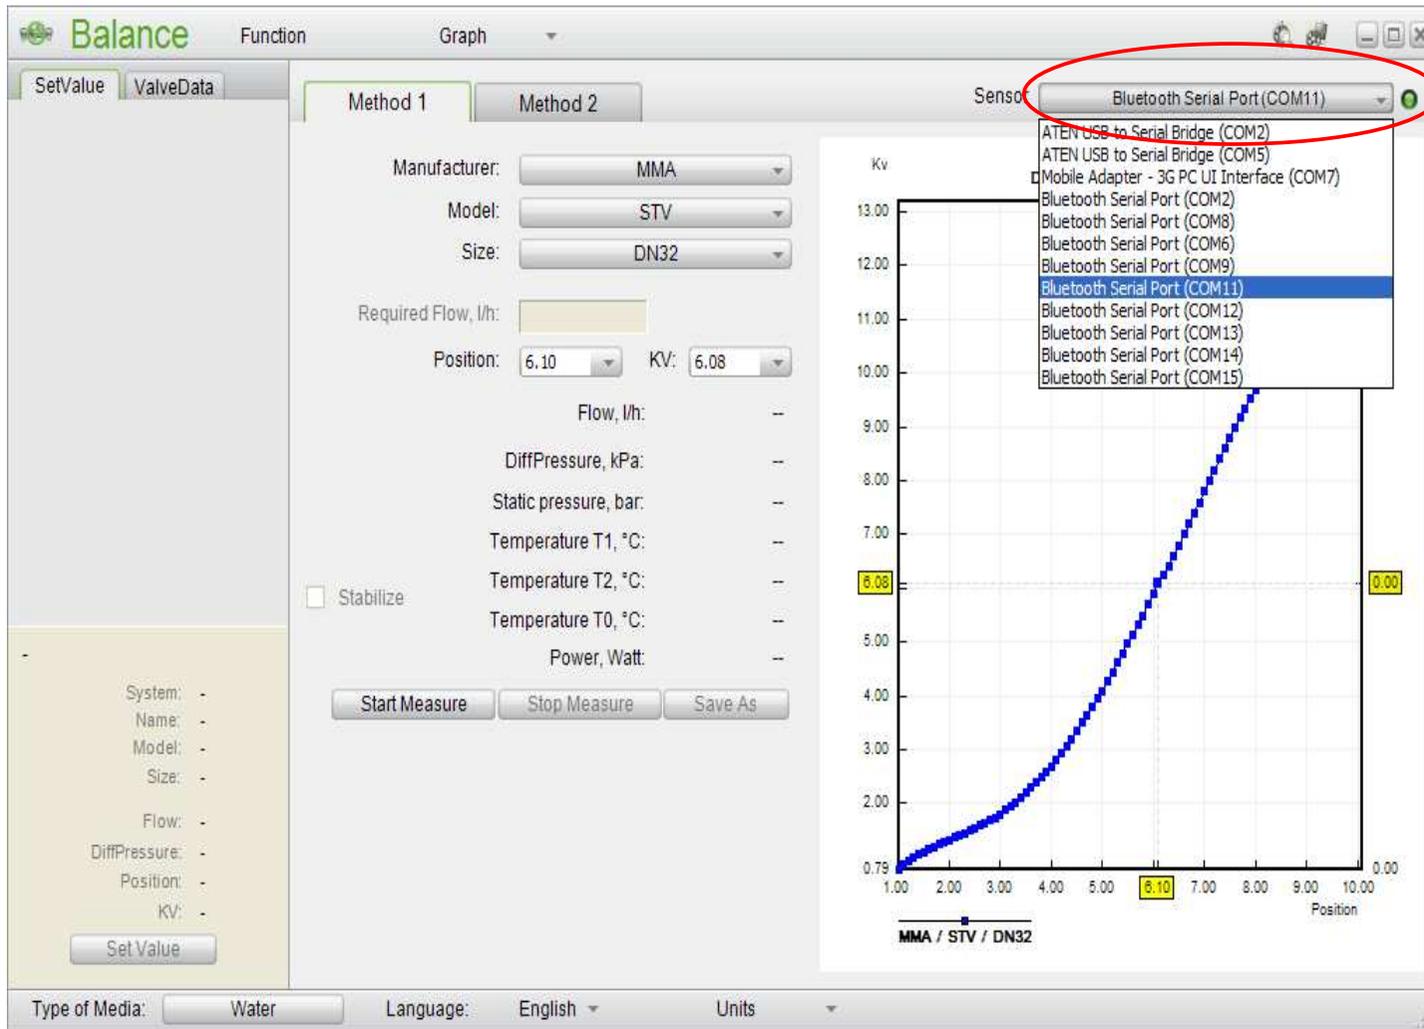

1. Click at the green Balance Flex Icon at the desktop.
2. Click at the Bluetooth Serial Port bar and Click at the sensor COM port number, in this example COM11.
3. The light indicator to the right of the bar will turn green, indicating contact between the Balance Flex program and the Sensor.